




▶ Audi e-tron

from 2019

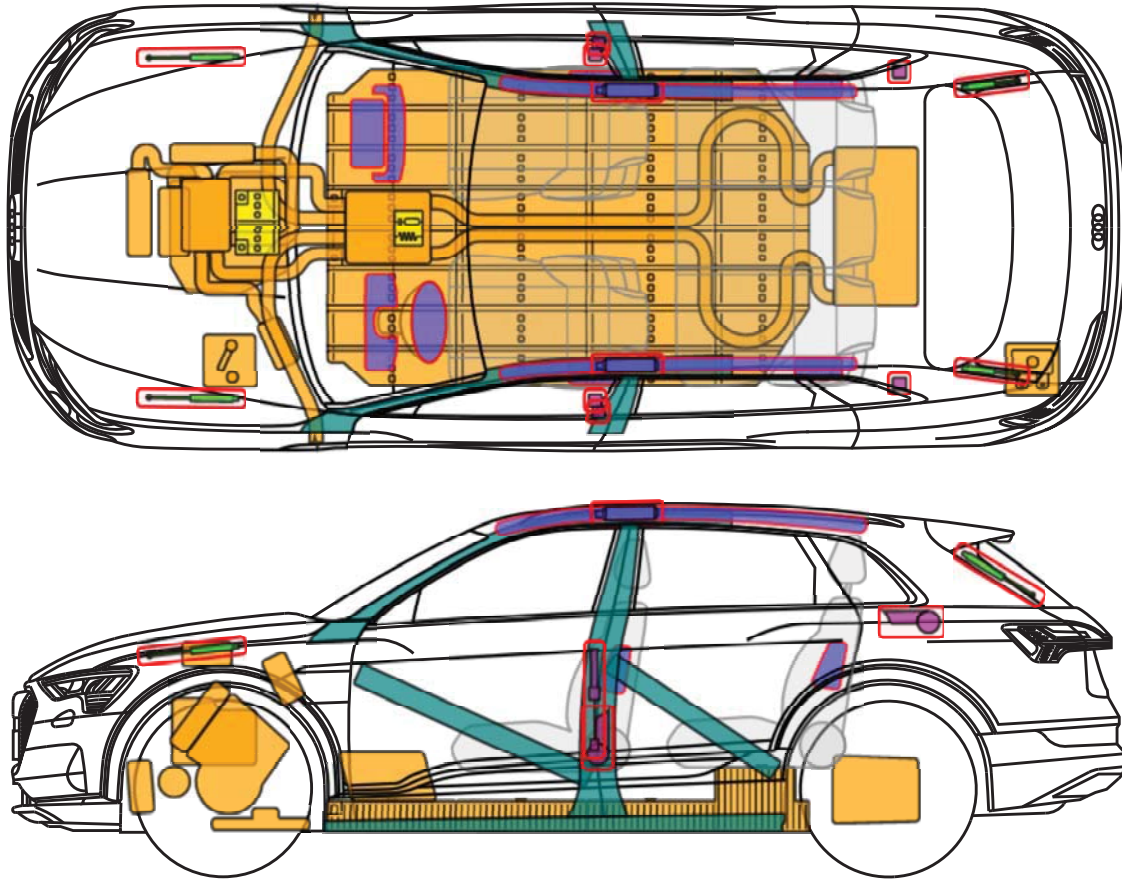

Legend

	Airbag		Reinforcement		SRS control unit		High voltage battery
	Stored gas inflator		Automatic roll bar		12 V Battery		High voltage cable/component
	Seatbelt pretensioner		Cylinder		Fuel Tank		High voltage emergency disconnect

e-tron



## ▶ Audi e-tron

from 2019

### Characteristic features

The Audi e-tron can be identified by the characteristic body design (only electric drive variant), the charging socket and the e-tron logo.




### e-tron

The e-tron logo at the rear and side can optionally be deselected

### Vehicle immobilization

1. Push "P"-Button on gear lever
2. Apply parking brake

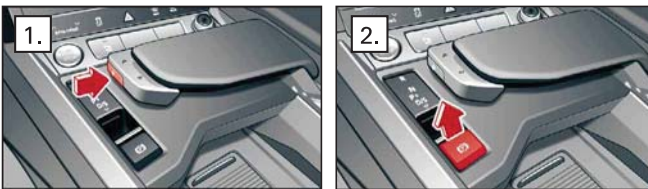

### Switch off ignition

Press START-STOP button without depressing brake pedal



**Warning:** When pressing the START-STOP button and depressing the brake pedal at the same time, the vehicle switch to "ready to drive"!



## ▶ Audi e-tron

from 2019

### Deactivation of High Voltage System


 **The High Voltage System is automatically deactivated during accidents in which the airbag(s) deployed.**

For all other cases, deactivate the High Voltage System as follows

#### Alternative 1 – Emergency disconnect in the vehicle front end accessible,

##### open the motor compartment hood

1. Locate the emergency disconnect ➔ on the left side next to the plenum panel
2. Pull out red flap from emergency disconnect
3. Pull out black plug while pressing the red tab

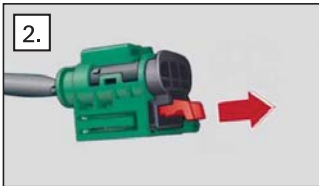

#### Alternative 2- Emergency disconnect fuse in trunk

1. Remove the cargo floor
2. Remove fuse box cover
3. Identify emergency fuse disconnection tab and pull out the tab





## ▶ Audi e-tron

from 2019


### Disconnect 12 V battery

The 12 V battery is located in the vehicle front end under a cover, next to the plenum panel.

The 12 V negative battery cable is connected to the chassis suspension strut, see picture 1.  
Unscrew the negative battery cable from the chassis suspension strut, see picture 2.



picture 1

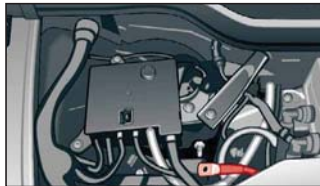

picture 2

The 12 V battery can be accessed when the cover and control boxes located on the top of the battery are removed, see picture 3-5.



picture 3



picture 4



picture 5

### Disconnect charging cable

Vehicle connected to charging station:

1. Unlock vehicle via remote control or central locking switch
2. Disconnect charging cable

If needed, refer to additional steps in this rescue sheet

